

# **AWK-6222**

## **Quick Installation Guide**

---

**Moxa AirWorks**

**Third Edition, April 2014**



© 2014 Moxa Inc. All rights reserved.

**P/N: 1802062220012**

## Notes for the Reader



### WARNING

Indicates that death or personal injury may occur if proper precautions are not taken.



### ATTENTION

Indicates that possible damage to this product or your property may result if proper precautions are not taken.

**NOTE** Highlights important information related to this product.

## Package Checklist

Moxa's AWK-6222 is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

- 1 AWK-6222
- 2 Omni-directional antennas (5dBi, N-type (male), 2.4GHz)
- 1 Quick Installation Guide
- 1 Software CD
- 1 Moxa Product Warranty Booklet
- 1 Accessory Pack (includes wall-mounting kit, screws, field-installable power plug, field-installable RJ45 plug, DI/DO cap, and Ethernet cap)

**NOTE** The items above come with the standard version AWK-6222. The package contents may vary for customized versions.

## Installation

Before installing the AWK-6222, make sure that all items in the Package Checklist are in the box. In addition, you will need access to a notebook computer or PC equipped with an Ethernet port. The AWK-6222 has a default IP address, user name and password that you must use when resetting or connecting to your AWK-6222 device.

Default IP address: **192.168.127.253**

User name: **admin**

Password: **root**

Please read "**Chapter 2: Getting Started**" in the AWK-6222 User's Manual for more details about installation and configuration.




### ATTENTION

For security reasons, we strongly recommend changing the password. To do so, go to **Maintenance** → **Password**, and then follow the on-screen instructions.

**NOTE** To make the change effective, you must save the change and then click **Restart → Save and Restart** button to apply all changes.

## Panel Layout of the AWK-6222

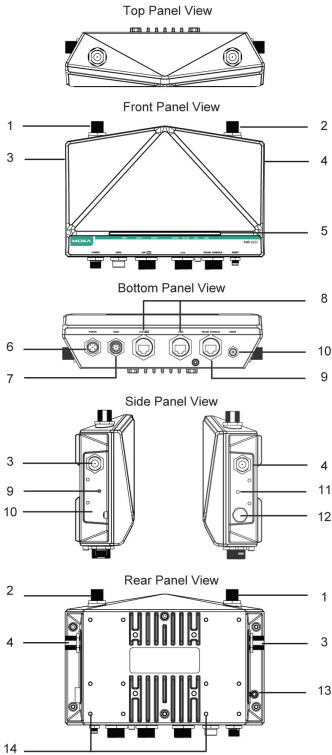

1. MAIN 1 antenna port.
2. MAIN 2 antenna port.
3. AUX 1 antenna port.
4. AUX 2 antenna port.
5. LEDs for PWR, FAULT, STATE, WLAN1, WLAN2, LAN1, and LAN2.
6. M12 A-coding connector for PWR1 and PWR2.
7. M12 8-pin connector for DI/DO
8. 10/100BaseT(X) RJ45 Port : LAN1 and LAN2
9. RS-232 console port.
10. Reset button
11. Screw holes for wall mounting
12. Waterproof vent
13. Grounding screw
14. Screw holes for DIN-rail mounting




### ATTENTION

Please DO NOT open or remove vent **12**. Removing the seal will void the warranty.

All exposed connectors, including **1 - 4, 6 - 9**, should be tightly covered by suitable caps when they are not in use.

## Dimensions (unit = mm)

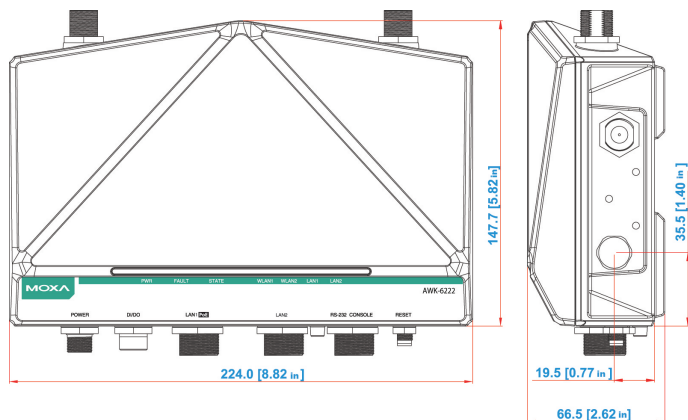


## Wall Mounting

In most applications, wall mount provides an easier installation. You will find it quite easy to mount AWK-6222 on the wall, as illustrated below.


### STEP 1:

Attach the wall-mounting kit with **M4** screws, as shown in the diagram below.

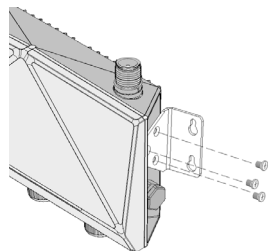

### STEP 2:

Mounting the AWK-6222 on the wall requires 4 screws. Use the AWK-6222 device, with wall-mounting kit attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws should be between **5.5mm** and **8.5 mm** in diameter, and the shafts should not be more than 5.0 mm in diameter, as shown in the figure.

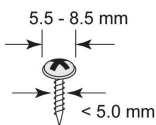

Do not screw the screws all the way in to the wall—leave a space of about 2 mm to allow room to slide the wall-mounting kit between the wall and the screws.




## ATTENTION


You can test the screw head and shank size by inserting the screw into one of the keyhole shaped apertures of the wall mounting plates before it is screwed into the wall.

### STEP 3:

Once the screws are fixed into the wall, insert the four screw heads through the large opening of the keyhole-shaped apertures, and then slide the AWK-6222 downwards, as indicated to the right. Tighten the four screws for added stability.

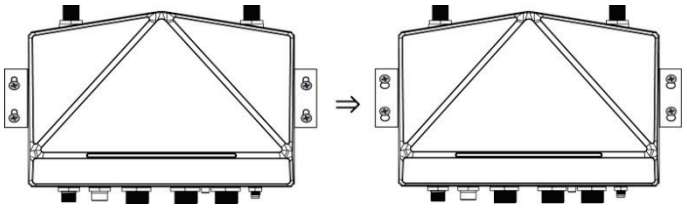

## DIN-Rail Mounting (Optional)

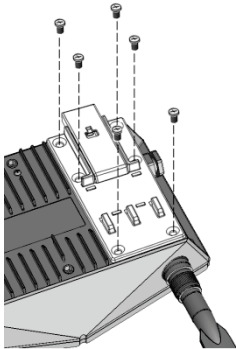


The **DK-DC50131** die-cast metal kit can be bought separately, and enable easy and robust installation for the AWK-6222. A pair of DK-DC50131s is needed for DIN-Rail mounting. To install the DIN-Rail mounting kits, tightly attach the two DIN-Rail mounting kits on the rear panel of AWK-6222 with 12 screws. (6 screws for each kit)

## To Install


### STEP 1:

Use the recessed button on the spring-loaded bracket to lock it into position.

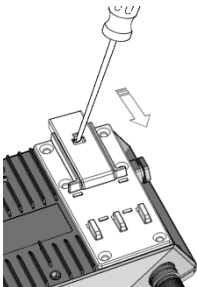

### STEP 2:


Insert the top of the DIN-Rail into the slot just below the upper hook of the DIN-Rail mounting kit. Push the AWK-6222 toward the DIN-Rail until the DIN-Rail attachment bracket snaps into place.

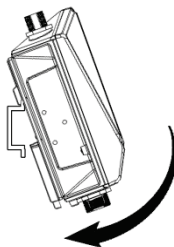

## To Release


### STEP 1:

Pull out the two spring-loaded brackets from the bottom until they are fixed in the "release" position.

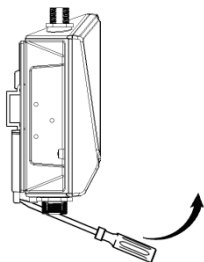

### STEP 2:

Pull the AWK-6222 out and upward.

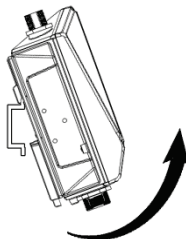

## Wiring Requirements



### WARNING

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa AWK-6222.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following items:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.  
**NOTE:** Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring with similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- It is strongly advised that you label wiring to all devices in the system when necessary.

## Grounding Moxa AWK-6222

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.




### ATTENTION

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel. There must be no potential difference between two ground potentials, otherwise there is a risk that the device could be destroyed.

## Wiring the Redundant Power Inputs

The AWK-6222 must be connected to a power-over-Ethernet (PoE) IEEE 802.3af compliant power source or an IEC60950 compliant limited power source. When AWK-6222 is powered via DC power, the M12 A-coding connector on the bottom panel is used for the AWK-6222's two redundant inputs. The pin assignment is shown below:

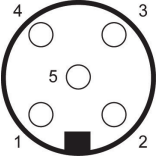

Pin	Power Input
1	V1+
2	V2+
3	V1-
4	V2-
5	GND



### ATTENTION

This product is intended to be supplied by a Listed Power Unit marked "Class 2" or "LPS" and rated O/P: 12 to 48 VDC, minimum 6 W (12 V/0.494 A to 48V/0.121 A).

Make sure the External Power Adaptor (including power cords and plug assemblies) provided with the unit is certified and suitable for use in your country.

Before connecting the AWK-6222 to the DC power inputs, make sure the DC power source voltage is stable.

Please also note, the PoE networks can not route to the outside plant.




# Wiring the Digital Inputs and Relay Contact

## (Digital Output)

The AWK-6222 has two sets of digital input—DI1 and DI2. Each DI comprises two contacts of the 8-pin M12 connector on the AWK-6222's bottom panel. These two digital inputs can be connected to digital-output-enabled sensors for on-site status monitoring.

The AWK-6222 also has one relay output, which consists of the two contacts. These relay contacts are used to detect user-configured events. The two wires attached to the relay contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the relay circuit will be closed.

A field-installable plug, **M12A-8PMM-IP68**, is recommended for connecting the AWK-6222's DIs and relay.

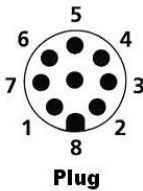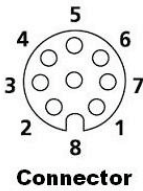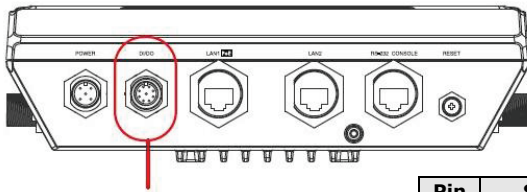

Pin	Signal
1	Relay
2	
3	DI1 I1
4	DI1 COM_1
5	DI2 I2
6	DI2 COM_2
7	Reserved
8	

## Communication Connections


### 10/100BaseT(X) Ethernet Port Connection

The 10/100BaseT(X) ports located on the AWK-6222's bottom panel are used to connect to Ethernet-enabled devices.

The pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports are shown below.

MDI Port Pinouts		MDI-X Port Pinouts	
Pin	Signal	Pin	Signal
1	Tx+	1	Rx+
2	Tx-	2	Rx-
3	Rx+	3	Tx+
6	Rx-	6	Tx-

8-pin RJ45

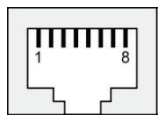




## RS-232 Connection

The AWK-6222 has one RS-232 (8-pin RJ45) console port located on the bottom panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable to connect the Moxa AWK-6222's console port to your PC's COM port. You may then use a console terminal program to access the AWK-6222 for console configuration.

### Console Pinouts for 10-pin or 8-pin RJ45

10-Pin	Description	8-Pin
1	-----	
2	DSR	1
3	RTS	2
4	GND	3
5	TxD	4
6	RxD	5
7	DCD	6
8	CTS	7
9	DTR	8
10	-----	

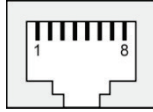

- NOTE**
1. The pin numbers for male DB9 and DB25 connectors, and hole numbers for female DB9 and DB25 connectors, are labeled on the connector. However, the numbers are typically quite small, so you may need to use a magnifying glass to see the numbers clearly.
  2. The pin numbers for both 8-pin and 10-pin RJ45 connectors (and ports) are typically not labeled on the connector (or port). Refer to the pinout diagram above to see how RJ45 pins are numbered.




### ATTENTION

To ensure the IP68-rated connectivity, you must use a waterproof housing during any communication activities. An IP68-rated field installable plug, which is attached in AWK-6222's accessory pack, may be needed in this case. The installation guide is shown below:

# Waterproof RJ45 Plug (Optional)


## Dimensions (unit: mm)

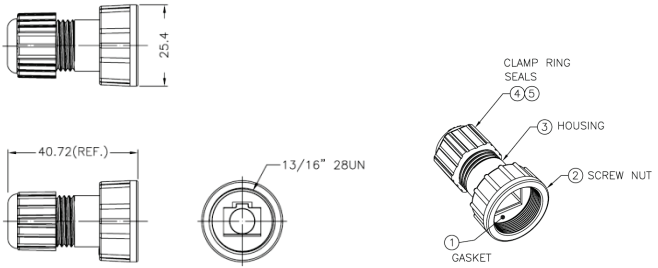

## Installation


### STEP 1:

Attach the gasket ① to the housing ③

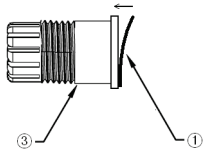


### STEP 2:

Insert the cable (ex. CAT5e) through the clamp ring ④, screw nut ②, seal ⑤ and housing ③, as follows:

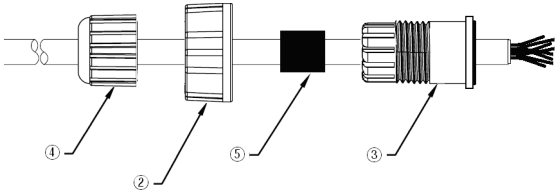

### STEP 3:


Crimp the modular RJ plug to the cable; (NOTE: the snagless cover shield and strain-relief boot are not recommended.) Then, assemble the seals and the housing (③ and ⑤).

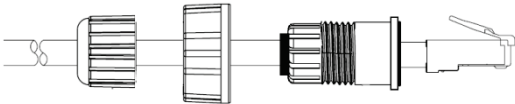

### STEP 4:

Tightly screw the clamp ring ④ to the housing and check to make sure that the plug is securely fastened.

(NOTE: for a tighter connection, you can connect the RJ-45 plug to the AWK-6222 before STEP 4.)

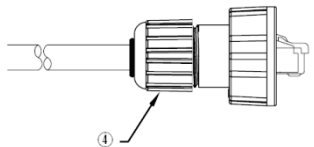

## LED Indicators

The front panel of the Moxa AWK-6222 contains several LED indicators. The function of each LED is described in the table below.

LED	Color	State	Description
<b>PWR</b>	Green	On	Power is being supplied (from power input 1 or 2, or PoE)
		Off	Power is <b>not</b> being supplied.
<b>FAULT</b>	Red	On	Relay is event-triggered.
		Blink (slow)	Cannot get an IP address from the DHCP server (interval: 1 sec).
		Blink (fast)	IP address conflict (interval: 0.5 sec).
		Off	Normal status.
<b>STATE</b>	Green/ Red	Green	Software Ready.
		Green Blink	The AWK Search Utility has located the AWK. (interval: 1sec).
		Red	Booting or Error condition.
<b>WLAN 1</b>	Green/ Amber	Green On	WLAN is functioning in <b>Client/Slave</b> mode.
		Green Blink	WLAN's is transmitting data in <b>Client/Slave</b> mode.
		Amber On	WLAN is functioning in <b>AP/Bridge/Master</b> mode.
		Amber Blink	WLAN's is transmitting data in <b>AP/Bridge/Master</b> mode.
		Off	WLAN is not in use or not working properly.
<b>WLAN 2</b>	Green/ Amber	Green On	WLAN is functioning in <b>Client/Slave</b> mode.
		Green Blink	WLAN's is transmitting data in <b>Client/Slave</b> mode.
		Amber On	WLAN is functioning in <b>AP/Bridge/Master</b> mode.
		Amber Blink	WLAN's is transmitting data in <b>AP/Bridge/Master</b> mode.
		Off	WLAN is not in use or not working properly.
<b>LAN 1</b>	Yellow/ Green	Yellow On	LAN port's 10Mbps link is active.
		Yellow Blink	Data is being transmitted at 10 Mbps.
		Yellow Off	LAN port's 10Mbps link is inactive.
		Green On	LAN port's 100Mbps link is active.
		Green Blink	Data is being transmitted at 100 Mbps.
		Green Off	LAN port's 100Mbps link is inactive.
<b>LAN 2</b>	Yellow/ Green	Yellow On	LAN port's 10Mbps link is active.
		Yellow Blink	Data is being transmitted at 10 Mbps.
		Yellow Off	LAN port's 10Mbps link is inactive.
		Green On	LAN port's 100Mbps link is active.
		Green Blink	Data is being transmitted at 100 Mbps.
		Green Off	LAN port's 100Mbps link is inactive.

# Specifications

## WLAN

Standards	IEEE 802.11a/g/b for Wireless LAN IEEE 802.11i Wireless Security IEEE 802.3u 10/100BaseT(X) for Ethernet LAN IEEE 802.3af for Power-over-Ethernet IEEE 802.1D/w STP/RSTP
Spread Spectrum and Modulation (Typical)	DSSS with DBPSK, DQPSK, CCK OFDM with BPSK, QPSK, 16QAM, 64QAM 64QAM @ 54 Mbps, 16QAM @ 24/36 Mbps, QPSK @ 12/18 Mbps, CCK @ 11/5.5 Mbps, DQPSK @ 2 Mbps, DBSK @ 1 Mbps
Operating Channels (Central Frequency)	US: 2.412 to 2.462 GHz (11 channels) 5.18 to 5.24 GHz (4 channels) EU: 2.412 to 2.472 GHz (13 channels) 5.18 to 5.24 GHz (4 channels)
Security	64-bit and 128-bit WEP encryption, WPA /WPA2 Personal or Enterprise (IEEE 802.1X/ RADIUS, TKIP and AES)
Protocol	General Protocols: Proxy ARP, DNS, HTTP, HTTPS, IP, ICMP, SNMP, TCP, UDP, RADIUS, SNMP, PPPoE, DHCP, LLDP AP-only Protocols: ARP, BOOTP, DHCP, dynamic VLAN-Tags for 802.1X-Clients, STP/RSTP (IEEE 802.1D/w)
Data Rates	802.11b: 1, 2, 5.5, 11 Mbps 802.11a/g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
Transmit Power	802.11b: Typ. 23±1.5 dBm @ 1 to 11 Mbps 802.11g: Typ. 18±1.5 dBm @ 6 to 24 Mbps, Typ. 16±1.5 dBm @ 36 to 48 Mbps, Typ. 15±1.5 dBm @ 54 Mbps 802.11a: Typ. 20±1.5 dBm @ 6 to 24 Mbps, Typ. 19±1.5 dBm @ 36 Mbps, Typ. 18±1.5 dBm @ 48 Mbps, Typ. 17±1.5 dBm @ 54 Mbps
Receiver Sensitivity	802.11b: -97 dBm @ 1 Mbps, -94 dBm @ 2 Mbps, -92 dBm @ 5.5 Mbps, -90 dBm @ 11 Mbps 802.11g: -93 dBm @ 6 Mbps, -91 dBm @ 9 Mbps, -90 dBm @ 12 Mbps, -88 dBm @ 18 Mbps, -84 dBm @ 24 Mbps, -80 dBm @ 36 Mbps, -76 dBm @ 48 Mbps, -74 dBm @ 54 Mbps 802.11a: -90 dBm @ 6 Mbps, -89 dBm @ 9 Mbps, -89 dBm @ 12 Mbps, -85 dBm @ 18 Mbps, -83 dBm @ 24 Mbps, -79 dBm @ 36 Mbps, -75 dBm @ 48 Mbps, -74 dBm @ 54 Mbps

**Interface**

Default Antenna	2.4GHz, 5dBi, Omni-directional antenna
Antenna Connector	N-type (female)
DI/DO Connection	8-pole M12 connector
Alarm Contact	1 relay output (capacity: 1A @24VDC)
Digital Input	2 electrically-isolated inputs +3 to -30V for state "0" (OFF) +13 to +30V for state "1" (ON) Max. input current: 8 mA
Console	RS-232 (Waterproof RJ45 type)
LAN Port	10/100BaseT(X) auto negotiation speed
LED Indicators	PWR, FAULT, STATE, WLAN1, WLAN2, LAN1, and LAN2

**Power**

Input Voltage	48 VDC Power-over-Ethernet (IEEE 802.3af) or 12 to 48 VDC, redundant dual DC power inputs
Input Current	(1.066A to 0.312A @12VDC-48VDC)
Input Current @ 24VDC	0.3 A
Overload Current	1.6 A
Protection	
Reverse Polarity Protection	Present

**Mechanical**

Casing	IP68 protection, aluminum case
Dimensions	224 x 147.7 x 66.5 mm (8.82 x 5.82 x 2.62 in)
Weight	1.8 kg
Installation	Wall Mounting, or DIN-Rail mounting

**Environmental**

Operating Temperature	-40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5 to 100% (non-condensing)

**Regulatory Approvals\***

Safety	EN60950-1, UL60950-1
Radio	EN300 328, EN301 893
EMC	EN301 489-1/-17, FCC Part 15, EN55022/55024, IEC61000-6-2/-4
Environmental/EMC compliancy	EN50155, EN50121-1/-4

\* Please check Moxa's website for the most up-to-date certification status.

**Reliability**

MTBF (mean time between failures):	284,072 hrs
------------------------------------	-------------

**WARRANTY**

5 years  
Details: See <http://www.moxa.com/warranty>

**ATTENTION**

The AWK-6222 is NOT a portable mobile device and should be located 20cm away from the human body.  
The AWK-6222 is NOT designed for the general public. A well-trained technician is required to safely deploy AWK-6222s and establish a wireless network..



## **ATTENTION**

Use the antennas correctly: The 2.4GHz antennas are needed when AWK-6222 operates in IEEE 802.11b/g. The 5GHz antennas are needed for IEEE802.11a. Make sure your antenna installation is within a safety area, which is covered by a lightning protection or surge arrest system.



## **ATTENTION**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



## **ATTENTION**

Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can come into contact with such circuits. When installing the antenna. Take extreme care not to come into contact with such circuits, because they may cause serious injury or death. For proper installation and grounding of the antenna. please refer to national and local codes (for example, U.S.:NFPA 70, National Electrical Code, Artical810, Canada: Canadian Electrical Code, Section 54).



## **ATTENTION**

For EXPLOSION-PROOF application, model AWK-6222 are designed and certified to meet ATEX shall be mounted in a suitable enclosure rate to at least IP54 and Pollution Degree 2 as defined in EN60529 and used within its rated electrical and environmental ratings.

### **Technical Support Contact Information** **[www.moxa.com/support](http://www.moxa.com/support)**

#### Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

#### Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

#### Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

#### Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231