# VPort 06-2 Series Quick Installation Guide

#### Moxa IP Camera

Edition 2.1, May 2018

#### Technical Support Contact Information www.moxa.com/support

#### Moxa Americas:

Toll-free: 1-888-669-2872 Tel: 1-714-528-6777 Fax: 1-714-528-6778

#### Moxa Europe:

Tel: +49-89-3 70 03 99-0 Fax: +49-89-3 70 03 99-99

#### Moxa India:

Tel: +91-80-4172-9088 Fax: +91-80-4132-1045 <u>Moxa China (Shanghai office)</u>: Toll-free: 800-820-5036 Tel: +86-21-5258-9955 Fax: +86-21-5258-5505

#### Moxa Asia-Pacific:

Tel: +886-2-8919-1230 Fax: +886-2-8919-1231



<sup>© 2018</sup> Moxa Inc. All rights reserved.

P/N: 1802000062012

## Overview

The VPort 06-2 series is a compact IP dome camera that supports FHD (1080P, 1920 x 1080) video image and H.264/MJPEG. It is designed for mobile video surveillance applications and features EN 50155 compliance, vandal-proofing (EN 62262 IK8), operating temperature of -25 to 55°C or -40 to 70°C (T model), rugged M12 Ethernet port, 1 audio input or built-in microphone, PoE or 24 VDC power inputs, IP66 rain and dust protection, dehumidifying membrane, and selectable lens models, for the versatility and ruggedness required to excel in many different installations and environments for mobile IP video surveillance applications.

## **Ordering Information**

	Model			Tempe	rature		
		Lens	Audio	-25 to	-40 to	Conformal	
PoE model	24 VDC model	(mm)		55°C	70°C	Coating	
VPort P06-2L25M	VPort 06-2L25M	2.5	Line-in	~	-	-	
VPort P06-2L36M	VPort 06-2L36M	3.6	Line-in	~	-	-	
VPort P06-2L42M	VPort 06-2L42M	4.2	Line-in	~	-	-	
VPort P06-2L60M	VPort 06-2L60M	6	Line-in	~	-	-	
VPort P06-2L80M	VPort 06-2L80M	8	Line-in	~	-	-	
VPort P06-2M25M	VPort 06-2M25M	2.5	Mic-in	~	-	-	
VPort P06-2M36M	VPort 06-2M36M	3.6	Mic-in	~	-	-	
VPort P06-2M42M	VPort 06-2M42M	4.2	Mic-in	~	-	-	
VPort P06-2M60M	VPort 06-2M60M	6	Mic-in	~	-	-	
VPort P06-2M80M	VPort 06-2M80M	8	Mic-in	~	-	-	
VPort P06-2L25M-T	VPort 06-2L25M-T	2.5	Line-in	-	~	-	
VPort P06-2L36M-T	VPort 06-2L36M-T	3.6	Line-in	-	~	-	
VPort P06-2L42M-T	VPort 06-2L42M-T	4.2	Line-in	-	~	-	
VPort P06-2L60M-T	VPort 06-2L60M-T	6	Line-in	-	~	-	
VPort P06-2L80M-T	VPort 06-2L80M-T	8	Line-in	-	~	-	
VPort P06-2M25M-T	VPort 06-2M25M-T	2.5	Mic-in	-	~	-	
VPort P06-2M36M-T	VPort 06-2M36M-T	3.6	Mic-in	-	~	-	
VPort P06-2M42M-T	VPort 06-2M42M-T	4.2	Mic-in	-	~	-	
VPort P06-2M60M-T	VPort 06-2M60M-T	6	Mic-in	-	~	-	
VPort P06-2M80M-T	VPort 06-2M80M-T	8	Mic-in	-	~	-	
VPort P06-2L25M-CT	VPort 06-2L25M-CT	2.5	Line-in	~	-	✓	
VPort P06-2L36M-CT	VPort 06-2L36M-CT	3.6	Line-in	~	-	✓	
VPort P06-2L42M-CT	VPort 06-2L42M-CT	4.2	Line-in	~	-	✓	
VPort P06-2L60M-CT	VPort 06-2L60M-CT	6	Line-in	~	-	✓	
VPort P06-2L80M-CT	VPort 06-2L80M-CT	8	Line-in	~	-	✓	
VPort P06-2M25M-CT	VPort 06-2M25M-CT	2.5	Mic-in	~	-	√	
VPort P06-2M36M-CT	VPort 06-2M36M-CT	3.6	Mic-in	~	-	√	
VPort P06-2M42M-CT	VPort 06-2M42M-CT	4.2	Mic-in	~	-	√	
VPort P06-2M60M-CT	VPort 06-2M60M-CT	6	Mic-in	~	-	√	
VPort P06-2M80M-CT	VPort 06-2M80M-CT	8	Mic-in	~	-	✓	
VPort P06-2L25M-CT-T	VPort 06-2L25M-CT-T	2.5	Line-in	-	~	✓	
VPort P06-2L36M-CT-T	VPort 06-2L36M-CT-T	3.6	3.6 Line-in – 🗸 🗸		✓		
VPort P06-2L42M-CT-T	VPort 06-2L42M-CT-T	4.2	Line-in	-	~	✓	
VPort P06-2L60M-CT-T	VPort 06-2L60M-CT-T	6	Line-in	-	~	✓	
VPort P06-2L80M-CT-T	VPort 06-2L80M-CT-T	8	Line-in	-	~	✓	

The following VPort 06-2 series models are available:

Мос	del			Tempe	rature	0
PoE model	24 VDC model	Lens (mm)	Audio	udio -25 to -40 to		Conformal Coating
VPort P06-2M25M-CT-T	VPort 06-2M25M-CT-T	2.5	Mic-in	-	~	~
VPort P06-2M36M-CT-T	VPort 06-2M36M-CT-T	3.6	Mic-in	-	~	~
VPort P06-2M42M-CT-T	VPort 06-2M42M-CT-T	4.2	Mic-in	-	~	~
VPort P06-2M60M-CT-T	VPort 06-2M60M-CT-T	6	Mic-in	-	~	~
VPort P06-2M80M-CT-T	VPort 06-2M80M-CT-T	8	Mic-in	-	~	~


#### Screw handle accessory package

Torx screwdriver for attaching/detaching the upper case.	4 sets of nut, gasket, and spring washer for mounting the camera.	4 indented hexagonal head tapping screws for mounting the camera on the ceiling.
<b>_</b>	000	2008





#### Sticker for camera mounting positions

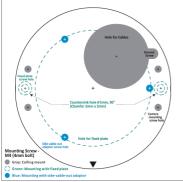

#### Contents of the Package

- Documentation and Software CD (includes User's Manual, Quick . Installation Guide, and VPort Utility)
- Quick installation guide (printed)
- Warranty card

NOTE Check the model name on the VPort's side label to determine if it is the correct one for your order.

NOTE This product must be installed in compliance with your local laws and regulations.

# **Product Description**

## Appearance



4-pin D-code M12 Ethernet connector: Can be used for both the PoE power supply (PoE model) and Auto MDI/MDI-X Ethernet connection

PIN	ТХ	
1	TD+	2
2	RD+	
3	TD-	
4	RD-	1 -

**NOTE** To connect the VPort 06/P06-2MP series to a network, use an Ethernet cable with D-code M12 connector and an M12 PoE switch or RJ45 PoE switch

M12 D-code to M12 D-code cable	M12 PoE switch (e.g., TN-5508-4PoE)
$\Diamond$	
M12 D-code and RJ45 cable	RJ45 PoE switch (e.g., EDS-P510)
Q	

**NOTE** The power input rating of the PoE model is 48 VDC, 0.2 A, with maximum power consumption of approximately 8.1 W.

The power input rating of the DC models are 12 VDC, 0.86 A, with maximum power consumption of 10.2 W, and 24 VDC, 0.38 A with maximum power consumption of 9.0 W.

- **NOTE** The equipment is designed for indoor installation only and is not intended to be connected to exposed (outside the plant) networks.
- DB9 connector (24 VDC model): Includes power input, digital input signal, and audio input (line-in model).

PIN	Con.
1	24 VDC +
2	NA
3	Audio +
4	NA
5	DI +
6	24 VDC return
7	NC
8	Audio -
9	DI -




 5-pin M12 connector (PoE model): Includes digital input signal, and audio input (line-in model).

PIN	Con.	3
1	DI +	
2	Line-in+	<b>●!</b> • <i>!</i>
3	DI -	4
4	Line-in -	5
5	NA	5

- Solid metal top cover: This top cover can be removed for adjusting the camera lens position.
- Transparent dome cover: The VPort 06-2 series is designed with a transparent PC dome cover, which is vandal-proof and satisfies EN 62262 (IEC 62262) Class IK8 requirements.
- **2 Torx screws for top cover:** These 2 torx screws are designed with anti-shedding to make installation more convenient. Use the L-type torx screwdriver to remove or attach the top cover.
- Built-in microphone: VPort 06-2-MIC series products have a built-in microphone, and can simultaneously display or record live video and audio.

**NOTE** The color of the form factor can be customized based on your installation environment. Please contact your Moxa sales representative for customization service.

#### Inside the Camera

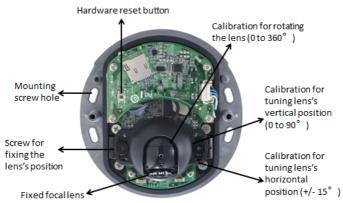

- Mounting screw holes: There are 4 mounting screw holes for mounting the VPort 06/P06-2 series on the ceiling or the accessory.
- Screw for fixing the lens's position: To adjust the position of the lens, loosen the thumb screw, and then retighten it after you are done with adjusting the position of the lens.
- Lens with fixed focal length: The VPort 06/P06-2 series includes models with 3 different focal lengths. Choose the appropriate focal length for your lens based on the viewing angle and object distance.
- Hardware reset button: Use a pointed object to depress the reset button to reboot or restore factory defaults.
  - > Reboot: press the button one time.
  - > Factory default: press the button and hold for at least 5 sec.
- Calibration for rotating lens (0 to 360°): Rotate the lens to get the optimal image. When done, mark the position of this calibration for future placement or mass installation.
- Calibration for adjusting lens's vertical position (0 to 90°): After adjusting the lens's vertical position, mark the position of this calibration for future placement or mass installation.
- Calibration for adjusting lens's horizontal position (±15°): After adjusting the lens's horizontal position, mark the position of this calibration for future placement or mass installation.

## Hardware Installation

Step 1: Open and remove the top cover.


Use the torx screwdriver to loosen the top cover screws and remove the dry pack that is in the camera.



**Step 2:** Use the markings on the installation sticker to position the drill bit before drilling holes. There are 3 types of installation.


### a. Mounting with 4 mounting screws

To mount the camera on the ceiling, drill a hole through the gray portion of the sticker and then mount the camera with the 4 nut/gasket/spring-washer sets and the 4 indented hexagonal head tapping screws.

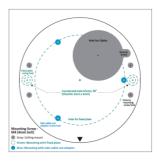

#### b. Mounting with the side-cable-out adapter

Use the side-cable-out adapter (VP-SCO2) if your installation requires the cable-out on the side. Drill a hole through the blue portion of the sticker for mounting the adaptor on the surface with 3 nut/gasket/ spring-washer sets and indented hexagonal head tapping screws. Then, mount the VPort 06-2 on the adapter with 4 M4 screws, which are provided in the VP-SCO2's package.

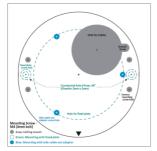


VP-SCO2





#### c. Mounting with the fixed plate

If you cannot use the nut/gasket/spring-washer set to mount the camera on your ceiling, use the VP-FP2 fixed plate. Drill holes through the green dotted-line and 4 camera mounting screw markings on the sticker, and then place the VP-FP2 inside the hole. Use the 2 countersunk screws to mount the VP-SP2. Finally, mount the VPort 06/P06-2 series on the fixed plate with the 4 indented hexagonal head tapping screws.

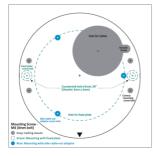

VP-FP2







**NOTE** The screw hole for mounting the VP-FP2 fixed plate is a countersink hole with 5 mm diameter, and 90° 2 x 2 mm chamfer. Take this into consideration when drilling these 2 screw holes.

**Step 3:** Connect the camera with the 4-pin M12 D-code Ethernet connector and DB9 / 5-pin M12 connector.

NOTE Connectors used with the cameras should be IP66 compliant.

**Step 4:** Loosen the screw for adjusting the horizontal, vertical, and rotating lens position. Once the lens position is correct, fix the screw.

NOTE 1. If required, two dry packs (VP-DP01) with stickers can be ordered separately to absorb moisture from the inside of camera. Stick the double-sided tapes onto two dry packs and use the other side of the tapes to stick the dry packs on the inside of the top cover to absorb any moisture that has entered the camera housing during installation.





 The dry packs may become saturated if exposed to the air for too long; for this reason, reattach the top cover immediately after sticking the dry packs inside the top cover. If the cover is removed at any time in the future, be sure to replace the dry packs before reattaching the cover.





- Make sure the top cover is attached tightly (place the screws in the holes such that they can stay unaided and tighten all of them. Retighten the screws in succession until they are all completely tightened.)
- 4. For the model with a microphone, be careful not to damage the metal spring on the small board mounted on the top cover.



## Software Installation

Step 1: Configure the VPort 06-2's IP address.

When the VPort 06-2 series is first powered on, the POST (Power On Self Test) will run for a few moments (about 30 seconds). The network environment determines how the IP address is assigned.

#### Network Environment with DHCP Server

For this network environment, the unit's IP address will be assigned by the network's DHCP server. Refer to the DHCP server's IP address table to determine the unit's assigned IP address. You may also use the Moxa VPort and EtherDevice Configurator Utility (edscfgui.exe), as described below:

#### Using the Moxa VPort and EtherDevice Configurator Utility (edscfqui.exe)

Run the edscfgui.exe program to search for the VPort. After the 1 utility's window opens, you may also click on the Search button

to initiate a search.

When the search has concluded, the Model Name, MAC address, IP 2. address, serial port, and HTTP port of the VPort will be listed in the utility's window.

You can double click the selected VPort, or use the IE web browser to access the VPort's web-based manager (web server).

#### Non DHCP Server Network Environment

If your VPort 06-2 series is connected to a network that does not have a DHCP server, then you will need to configure the IP address manually. The default IP address of the VPort 06-2 series is 192.168.127.100 and the default subnet mask is 255.255.255.0. Note that you may need to change your computer's IP address and subnet mask so that the computer is on the same subnet as the VPort.

To change the IP address of the VPort manually, access the VPort's web server, and then navigate to the System Configuration  $\rightarrow$  Network  $\rightarrow$ General page to configure the IP address and other network settings. Select the Use fixed IP address option to ensure that the IP address you assign is not deleted each time the VPort is restarted.

Step 2: Access the VPort 06-2 series' web-based manager.

Type the VPort 06-2 IP address in the web browser's address field and press Enter.

Step 3: Install the ActiveX Control Plug-in.

A security warning message will appear the first time you access the VPort's web-based manager. The message is related to installing the VPort ActiveX Control component on your PC or notebook. Click Yes to install this plug-in to enable the IE web browser for viewing video images.

Internet Explorer - Security Warning	: 🛛
Do you want to install this software?	
Publisher: <u>Moxa Networking (</u> More options	Install Don't Install
While files from the Internet can b	e useful, this file type can potentially harm re from publishers you trust. <u>What's the risk?</u>

**NOTE** For Windows XP SP2 or above operating systems, the ActiveX Control component will be blocked for system security reasons. In this case, the VPort's security warning message window may not appear. You should unlock the ActiveX control blocked function or disable the security configuration to enable the installation of the VPort's ActiveX Control component.

Step 4: Access the homepage of VPort 06-2 series' web-based manager.

After installing the ActiveX Control component, the homepage of the VPort 06-2 series' web-based manager will appear. Check the following items to make sure the system was installed properly:

- 1. Video Images
- 2. Video Information



Step 5: Access the VPort's system configuration.

Click on **System Configuration** to access the overview of the system configuration to change the configuration. **Model Name**, **Server Name**, **IP Address**, **MAC Address**, and **Firmware Version** appear on the green bar near the top of the page. Use this information to check the system information and installation.

For details of each configuration, check the user's manual on the software CD.

Concernance of the second		Section (Section)					
NAME AND ADDRESS OF T		Sector Contraction Contractor					
Nan Mary Ann Mary	System Co		d describer of well-configuration group in generication, their on a plan agric	the Million of Second Legend	. and day city or	 	
A LOCATE AND A LOC	lumo.	~	the second second				
2.90	Contine .	Configuration	Configure and Carters				
1 Televit		Contraction of the local division of the loc					
a vites		Bannal Data Tana	Rating weat News stochast and lancetone Antipes Date: They				
1 (30)							
		ACCUST.	Alther strater, over and over a Appoint windependent				
a teoristi		Text Parcept	Aut spitter land menger republics Apriment og and egereden ladermeden				
2 Dearing		And a state of the second	Verlagen and and and an end of the second se				
		The Control	The select D				
		The Context	Terrary (MIT)				
		Table Conce	Aurica Familian Solation				
mainth age dow		Aller Aller	Name of Adding States				
		2000	On the set of the set				
		74	Conference Statement of the West				
		2214	Verhaus 2014				
		2214	Configure 2014 Reside UNIT Lancient				
		10	Cardio and Tablicate of Cardion				
		Annual Adv. PT	The second second is a second second shared share in she they have				
		Charles Mr. 17	Address for two and if it is seen to an indexed share by the big then if Conference for 1987 without				
		The later	Non-tenang of the feature result result in the most enhance of the				
			Veloce Produce				
		Interna Calificati	Conference the Information of Inforcinence				
	1944	TURO MAIS	Surface Berrian Ten esting				
		Paulic Puest	Pacing Palanter of Parat Paula ray				
		distant a proph	Verlagene discher internet enderge				
	100	Indian Parameters	Cardle are tables forwarden writing				
	1000	Canada Tamper	Configure Campon Tamper settings				
		Work Dated or	Carliger Book Detailer sellings				
	_	Secretal StateAt	Configure Sequential Statishist antibios, Schedule and Haramit Barthetics	4			
	613mm	when sarily	Stelligen deal which any story				




# ATTENTION

## Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa VPort 06/P06-2 series. Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.


You should also pay attention to the following:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- We strongly advise labeling wiring to all devices in the system.

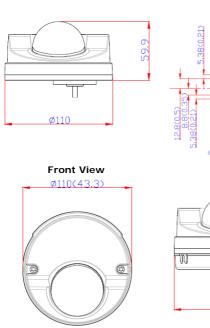


Dimensions (mm)

Top View

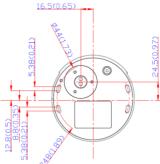

**Bottom View** 

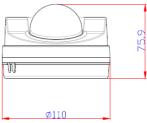

#### Camera with SCO2 adaptor