

OnCell G3101/G3201 Series Quick Installation Guide

Edition 2.1, August 2016

Technical Support Contact Information **www.moxa.com/support**

Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045

MOXA®

© 2016 Moxa Inc. All rights reserved.

P/N: 1802031010012



Overview

There are currently four models in the OnCell G3101/G3201 series of IP-modems: the OnCell G3111, OnCell G3151, OnCell G3211, and OnCell G3251. The main difference between the models is the serial interface type and number of ports. The OnCell G3101/G3201 industrial RS-232, RS-232/422/485 GSM/GPRS IP modems are some of the most affordable, and versatile products available in the cellular networking market today. These modems also provide remote access and TCP/IP support, and can be configured over a network.

Package Checklist

Moxa's OnCell G3101/G3201 Series is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

Standard Accessories

- Omni 1 dBi rubber SMA antenna
- (model name: ANT-CQB-ASM-01)
- DIN-rail kit
- DC Power Supply (screw-on)
- Rubber stand
- Product warranty statement
- Quick installation guide (printed)
- Warranty card


Optional Accessories

- Quad-band GSM/GPRS antennas for OnCell G3101/G3201 series (impedance = 50 ohms):
 - **ANT-CQB-AHSM-00-3m:** Omni 0dBi/10cm, magnetic SMA quad-band antenna (impedance = 50 ohms), 3 m
 - **ANT-CQB-AHSM-03-3m:** Omni 3dBi/25cm, magnetic SMA quad-band antenna (impedance = 50 ohms), 3 m
 - **ANT-CQB-AHSM-05-3m:** Omni 5dBi/37cm, magnetic SMA quad-band antenna (impedance = 50 ohms), 3 m


Note: Please notify your sales representative if any of the above items are missing or damaged.

Hardware Introduction


Top View

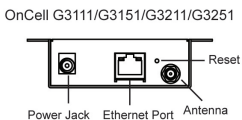


Front Views

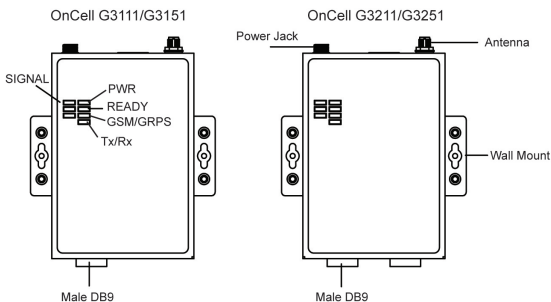

Rear Views

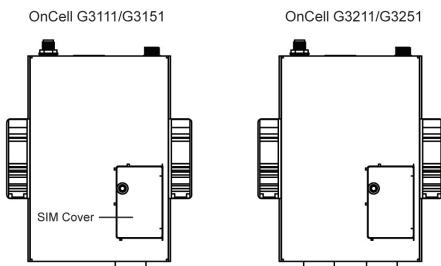

Bottom Views



Reset Button

Press and hold the Reset button for 5 second to load factory defaults: Use a pointed object, such as a straightened paper clip or toothpick, to press the reset button. This will cause the Ready LED to blink on and off. The factory defaults will be loaded once the Ready LED stops blinking (after about 5 seconds). At this point, you should release the reset button (the default IP is 192.168.127.254).

LED Indicators

The LED indicators on the front panel of the OnCell G3101/G3201 are described in the following table.

Type	Color	LED Function
PWR	Green	Activation of DC Power.
	Off	Power is off, or power error condition exists.
TX/RX	Green	The serial port is transmitting data.
	Amber	The serial port is receiving data.
	Off	No data is being transmitted or received through the serial port.
GSM/GPRS	Green	GSM is connected.
	Amber	GPRS is connected.
	Off	GSM/GPRS is disconnected.
Ready	Green	Steady on: Software Ready. Blinking slowly (1 second): The OnCell has been located by the OnCell Search Utility.
	Red (Over Green)	Steady on: Booting up, or IP fault. Blinking rapidly (0.5 second): IP conflict. Blinking slowly (1 second): Cannot get an IP address from the DHCP server.
	Off	Booting up or there is no error condition.
Signal (3 LEDs)	Green	Number of lit LEDs indicates signal level (at least 2 LEDs must be illuminated for data transmission)

Adjustable pull high/low resistor for RS-485 Port

DIP switches on the bottom of the OnCell G3151/G3251 are used to set the pull high/low resistor value for each serial port.

SW	1	2	3	4
	Pull High	Pull Low	Terminator	-
ON	1 K Ω	1 K Ω	120 Ω	-
OFF	150 K Ω	150 K Ω	-	-

NOTE If the pull high/low resistor on your device is already set for RS-485, make sure the default SW for RS-232 is "OFF" when you switch back to RS-232 interface.

Hardware Installation Procedure

STEP 1: Open the SIM cover, and insert the SIM card in the SIM card slot.



STEP 2: Connect the 12-48 VDC power adaptor to the OnCell G3101/G3201 series and then plug the power adaptor into a DC outlet.

STEP 3: To configure the OnCell, use an Ethernet cable to connect the OnCell directly to your computer's Ethernet interface.

STEP 4: Connect the OnCell G3101/G3201 series's serial port to a serial device.

DIN-Rail Mounting

The OnCell G3101 and G3201 series have built-in "ears" for attaching the IP modem to a wall or the inside of a cabinet. We suggest using two screws per ear to attach the IP modem to a wall or the inside of a cabinet. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown in the figure at the right.

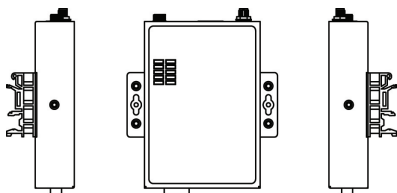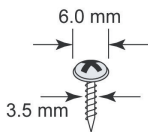

Software Installation Information


The User's Manual, OnCell Search Utility, and OnCell Driver Manager can be downloaded from the Moxa website at www.moxa.com. Please refer to the User's Manual for additional details on using the OnCell Search Utility and Driver Manager.

Pin Assignments and Cable Wiring

DB9 Male Port Pinouts

Note that the OnCell G3111 and G3211 only support RS-232. The RS-422/485 pin assignments only apply to the OnCell G3151 and G3251.


DB9 Male



OnCell G3111/G3211 (RS-232)

Pin	RS-232
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	-

DB9 Male



OnCell G3151/G3251 (RS-232/422/485)

Pin	RS-232	RS-422/485-4w	RS-485-2w
1	DCD	TxD-(A)	-
2	RxD	TxD+(B)	-
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
9	-	-	-

Specifications

Cellular Interface	
Standards	GSM/GPRS
Band Options	Quad-band 850/900 and 1800/1900 MHz
GPRS Multi-slot Class	Class 10
GPRS Terminal Device Class	Class B
GPRS Coding Schemes	CS1 to CS4
Tx Power	1 watt GSM 1800/1900, 2 watts EGSM 850/900
SIM Control	3 V
LAN Interface	
Number of Ports	1 (For configuration only)
Ethernet	10/100 Mbps, RJ45 connector, Auto MDI/MDIX
Magnetic Isolation Protection	1.5 KV built-in
SIM Interface	
Number of SIMs	1
SIM Control	3 V
Serial Interface	
Number of Ports	1 or 2
Serial Standards	G3111: 1 RS-232 port G3151: 1 RS-232/422/485 port G3211: 2 RS-232 ports G3251: 2 RS-232/422/485 ports
ESD Protection	15 KV
Power EFT/ Surge Protection	2 KV
Serial Communication Parameters	
Parity	None, Even, Odd, Space, Mark
Data Bits	5, 6, 7, 8
Stop Bit(s)	1, 1.5, 2 (when parity = None)
Flow Control	RTS/CTS, XON/XOFF
Baudrate	50 bps to 921.6 Kbps
Serial Signals	
RS-232	TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND
RS-422	Tx+, Tx-, Rx+, Rx-, GND
RS-485-4w	Tx+, Tx-, Rx+, Rx-, GND
RS-485-2w	Data+, Data-, GND
Management Software	
OnCell Central Manager	Centralized management solution for accessing private IPs from the Internet
(For Software download, Please check on www.moxa.com)	
Physical Characteristics	
Housing	Aluminum, providing IP30 protection
Dimensions	111 x 77 x 26 mm (4.37 x 3.03 x 1.02 in)
Power Requirements	
Number of Power Inputs	1 power jack
Input Voltage	12 to 48 VDC
Data Link	335 to 900 mA (peak) @ 12 V

Environmental Limits	
Operating Temperature	-30 to 55°C (-22 to 131°F)
Operating Humidity	5 to 95% RH
Storage Temperature	-40 to 75°C (-40 to 167°F)
Regulatory Approvals	
EMC	CE Class A , FCC Class A, UL
Warranty	
Warranty Period	5 years